## **Engineering & Technical Specifications**

# **AeroCell®**

Open Cell Foam Biofilter

#### 1. Collection

Sewage flows from the home or facility into a watertight primary tank or chamber. The solids settle and the liquid effluent flows by gravity through an effluent filter to the system.



#### 2. Treatment


The AeroCell Recirculating Media Filter provides biochemical treatment through passive biofiltration principles. The open cell foam cubes are uniform and provide ample surface area for biological growth. The media contains many voids to accommodate optimum air flow and water flow. Pretreated effluent is sprayed over the media using specially designed helical spray nozzles that provides even distribution over the entire surface area within the mod. Treated effluent is recirculated multiple times which optimizes treatment.

### 3. Dispersal

The highly treated effluent exits the 20% side of the mod and flows into a gravity drainfield or into a pump chamber for dosing LPP, drip irrigation, or other pressurized drainfields.

### **Treatment Performance**

ParametersTypical ValuesBOD5≤10 to ≤30 mg/lTSS≤10 to ≤30 mg/lTotal Nitrogen≤20 mg/l

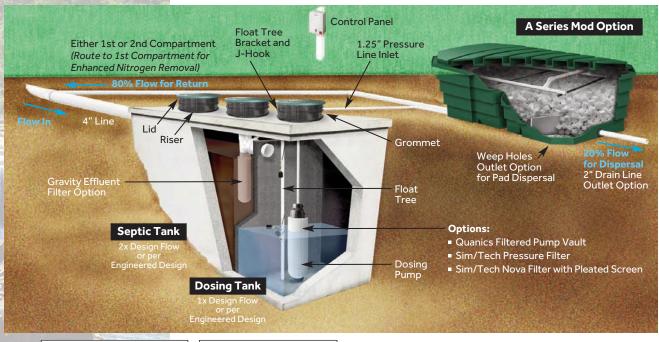







**IM Series Mod Option** 

#### Models

Model Number	Flow (GPD)	BOD Lo (LBS Typical	/D) ¯	Bedrooms	Tank Nominal Size (Gal)
Q-ATS-A400-80/20-AC	400	1	2	3	1200
Q-ATS-A400-2-80/20-AC	600	1.5	3	4 to 5	1800
Q-ATS-A400-2-80/20-AC	800	2	4	6	2400
Q-ATS-A400-3-80/20-AC	1000	2.5	5	7 to 8	3000
Q-ATS-A400-3-80/20-AC	1200	3	6	9	3600
Q-ATS-NS500-80/20-AC-N	500	1.25	2.5	3 to 4	1500
Q-ATS-540-AC-N	500	1.25	2.5	3 to 4	1500
Q-ATS-1060-AC-N	800	2	4	6	2400
Q-ATS-1530-AC-N	1500	3.75	7.5	10 to 12	4500

#### Notes:

- BOD loading based on desired effluent quality.
  Tank nominal size is combined volumes of 2/3 septic tank and 1/3 dosing tank.



# **CANUA**

